

48V Magnetic Track System - Installation (non-dimmable Version) - Remote driver

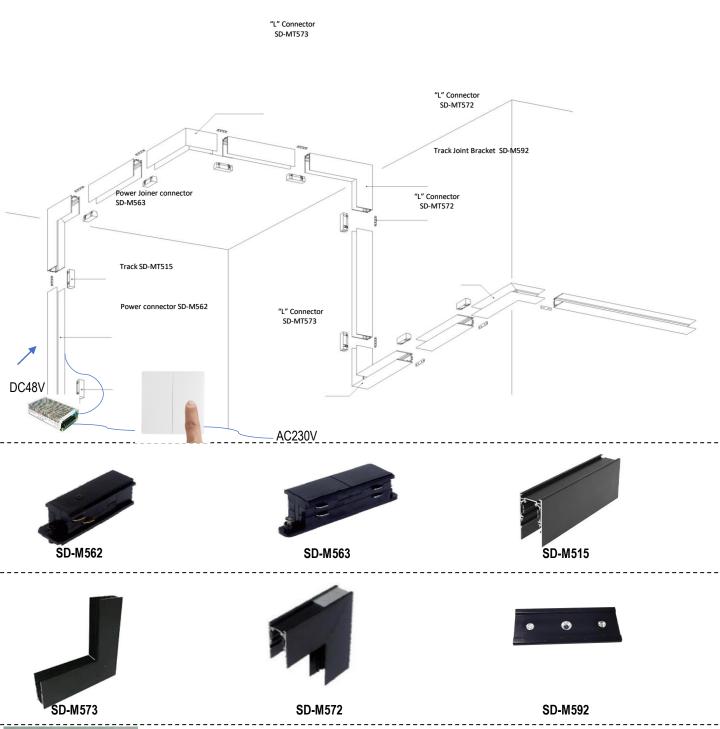


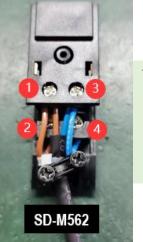

Tips:

- 1. The lamps are with DC48V driver inside, No need to distinguish between positive and negative
- 2. Regarding the wiring of SD-M562, there are 4 terminal, advise you to connect NO.1 and 2 in series, and NO.3 and 4 In series if not 3 different circuits in the track.

48V Magnetic Track System - Installation (non-dimmable Version) - Internal driver

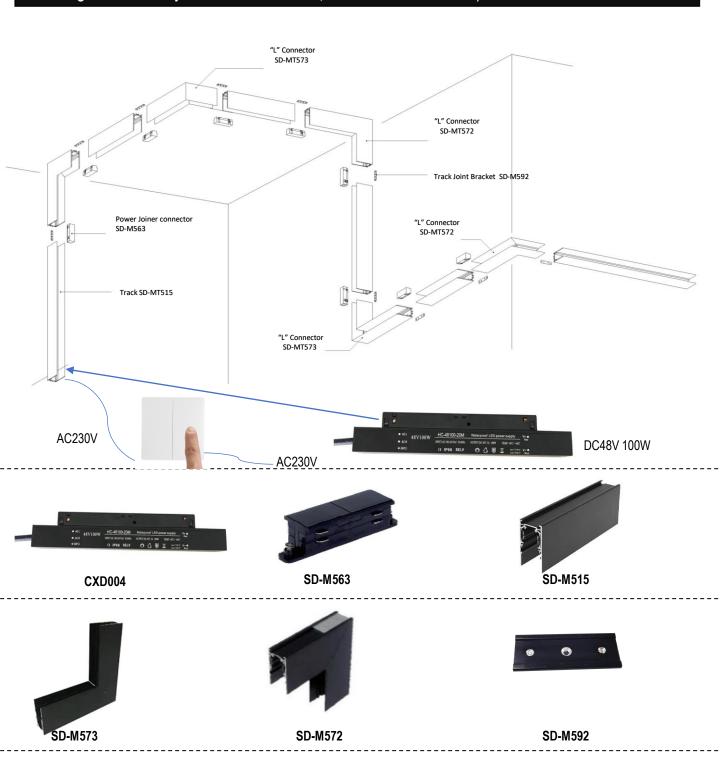



The driver in the rail